

Quilt Path and Quilter's Creative Touch Extended-Width Design Cheat Sheet

- Select Pantograph Mode
- Set your safe area EXTRA WIDE - at least as wide as the default size of the design
- Select Basic, **NOT** Power Panto
- Select the extended-width pattern that you've already imported
- Choose Equal Center [middle selection in the heart column]
- Tap on the bottom Star button until wrapping is turned off [option on the left]
- Tap Pattern Height to input the default or desired pattern height
- Tap Pattern Width to input the default or desired pattern width to keep the aspect ratio consistent - *not* the quilt's dimensions
- Select the number of Rows you need to fill your safe area
- Select Total Width, this time entering the width needed for the quilt
- Optimize by removing all jump stitches